




Corner Strips

Calculate Pillar/Post Spacing

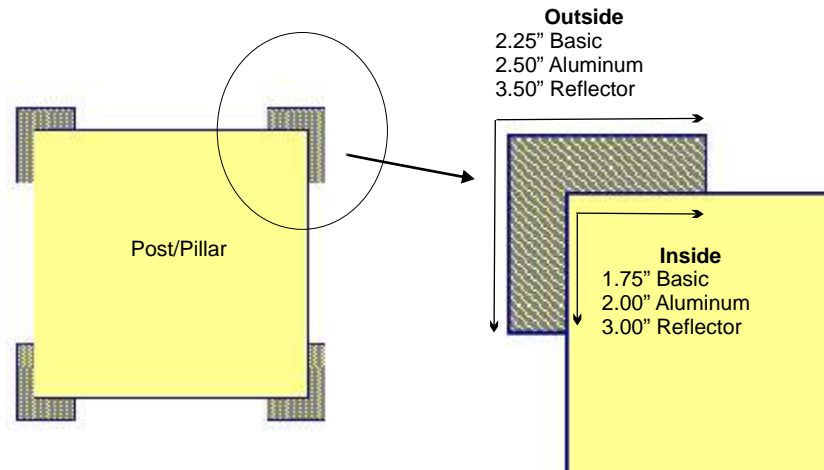

MEASURING

Measure the length of one side of the pillar "X"

1. Basic Corner Strip


- If you are installing a Basic Corner Strip only at one end - subtract 1.75" (1 3/4") from total side "X"
- If you are installing a Basic Corner Strip at both ends - subtract 3.5" (3 1/2") from total side "X"

2. Aluminum Corner Strip

- If you are installing an Aluminum Corner Strip only at one end - subtract 2.0" from total side "X"
- If you are installing an Aluminum Corner Strip at both ends - subtract 4.0" from total side "X"

3. Reflective Corner Strip

- If you are installing a Reflective Corner Strip only at one end - subtract 3.0" from total side "X"
- If you are installing a Reflective Corner Strip at both ends - subtract 6.0" from total side "X"

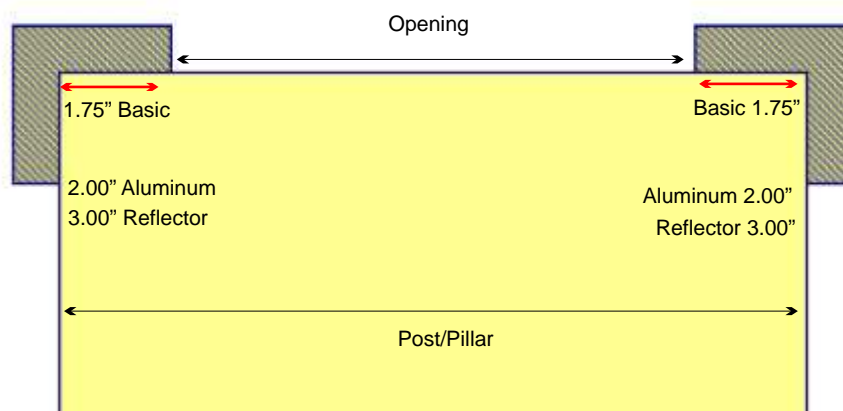

Copyright 2010 www.BoingSafety.com

136 Walker Street, Atlanta GA 30313
 TEL: 404-521-9054 ORDER 800-477-6434 FAX: 404-222-8366
 www.boingsafety.com info@boingsafety.com