



INSTRUCTIONS REMOVABLE BASIC CORNER STRIPS AND JUMBO GUARDS (SCREW ATTACHMENT)


For all applications where padding may need to be removed for maintenance or cleaning
Note: Does not apply to corner strips with aluminum inserts



1. Mark hole location



2. Drill with Forstner bit
- no more than 1/2 way

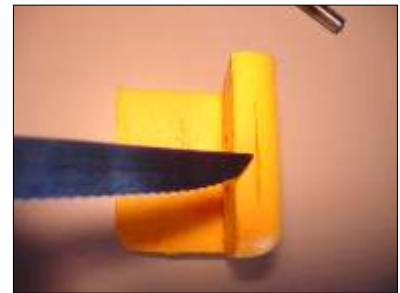

3. Cut slot for washer



4. Insert washer



5. Center washer



6. Seal slot & washer hole



7. Insert screw/bolt

Note:

Forstner bit, washer and screw/bolt sizes will depend on customer's specific application

Use silicone to seal the washer insertion slot as well as the main hole - will prevent water absorption.

If possible put some silicone on the screw/bolt head to help seal out water.



8. Attach padding

Copyright 2010 Boing Safety

136 Walker Street, Atlanta GA 30313
TEL: 404-521-9054 ORDER 800-477-6434 FAX: 404-222-8366
www.BoingSafety.com info@BoingSafety.com